

CONTENTS

Part 1 — BEARINGS

Introduction.....	1
Types Of Bearings	2
Loads On Bearings	2
Plain Bearings (Bushings)	3
Mountings For Plain Bearings	5
Lubrication Of Plain Bearings.....	7
Repair Of Plain Bearings.....	10
Diagnosis Of Plain Bearing Failures.....	14
Trouble Shooting Of Plain Bearings	16
Antifriction Bearings	18
Bearing Capacities.....	19
Types Of Ball Bearings	20
Types Of Roller Bearings	21
Types Of Needle Bearings	22
Mountings For Antifriction Bearings	23
Maintenance Of Antifriction Bearings.....	27
Diagnosis Of Failures.....	31
Lubrication Of Antifriction Bearings	36
Installation Of Antifriction Bearings.....	37
Trouble Shooting Of Antifriction Bearings	40

Part 2 — SEALS

Types Of Seals	43
How Seals Are Selected	44
Dynamic Seals.....	44
Radial Lip Seals.....	44
Exclusion Seals.....	50
Clearance Seals.....	52
Ring Seals.....	53
Face Seals.....	58
Compression Packings.....	59
Molded Packings.....	60
Diaphragm Seals.....	68
Static Seals.....	69
Nonmetallic Gaskets	69
Metallic Gaskets	72
Static O-Rings	72
Engine Cylinder Head Gaskets....	75
Sealants	80
Hardening-Type Sealants	81
Nonhardening Sealants	81
Tape Sealants	81